
WARNINGS LISTS PRINCECRAFT

CODE	DESCRIPTION	LOCATION
06899050230	Warning/Warning: "Gasoline vapour"	Near the cockpit
06899050200	Danger decal: "Engine injury/Contact breaker"	Near the cockpit
06899050210	Danger decal: "Engine injury/Ladder"	Fence reboarding
06899050240	Decal Warning: "Avoid gasoline leaks"	Near the fuel cap
06899050270	Decal Warning: "Avoid gas leaks".	Near the fuel cap
06899050280	Warning decal: "Injury to towing mast/ Parachute"	Near the towing mast
06899050300	Decal Warning: "Prevent falls on door/ Cloture"	On top of the doors
06899050320	Decal Warning: "Loss of Steering/Motor Control"	Near the cockpit
06899050340	Warning: cooking appliance flammable camper roof	On the camper roof
06899050380	Decal Warning: "Injury Towing Pole Use"	Near the cockpit
06899050390	Decal Warning: "Risk of broken bonnet/ rear gate to be secured"	Near the cockpit
06899050400	Speed 5 mph or 8 km/h if cushion raised	On the basis of the seat
06899050460	Att Decal: Tanning Area Damage (Security)	Interior of the tanning air bench
06899050530	Decal: «Danger of Death Carbon Monoxide»	Stern and transom
06899050540	Decal Att: Portable Fuel Tank Position	Near the engine
06899050550	Locking System: Wound Removable Insert Platform	On the Platform
06899050590	Decal Warning: Risk of Engine Breakage Bad Gasoline Ethanol	Near the fuel cape
06899050610	NFB Steering System Label	On the steering system
06899050640	Warning : death risk failure + wakeboard tower	Near the wakeboard tower
06899050690	Warning : max rear platform capacity	On the Platform
06899050700	Att Decal: Pinch Zone	Near the towing mast
06899050710	Warning: Risk Of Injury Speed. More Than 5 Mph With Swivel Seat	On the swivel seat bar
06899050720	Decal Warning : Limited visibility when seated for driving	On the helm station
06899050730	Warning: avoid breakage by frost: winteri- zation scale	Face of transom/ on the ladder
06899050810	"Ac charger plug identification accessory"	Compartment battery / charger
06899050820	"Ac charger plug electric motor identifica- tion accessory"	Compartment battery / charger
06899050830	Warning label. "Max. weight. Electric mo- tor".	Compartment electric motor



CODE	DESCRIPTION	LOCATION
06899050910	Max length configuration center rod sto- rage - Nanook	Compartment rod
06899050940	Warning : 12 gallon portable tank room not ventiled	Compartment fuel tank portative 12 gallons.
06899050950	Warning : content may be under pressure	Near the gas cap
06899051000	Warning transom (Mercury engine)	Transom / Stern
06899051030	Warning: Never tow with the tower in the lowered position.	Near / on the tower
06899051040	Warning : pinch zone clear space	Near / on the tower
06899051050	Global label : gathering all warning infor- mation	Navigation station near the driver
06899051060	Danger: contact with propeller / carbon monoxide	Transom / Stern
06899051110	Winterization combo recirculation/pump- out system maintenance	Recirculation/pump-out system box
06899051300	Warning : Equinox keyswitch tower	Near / on the tower / stern
06899051310	Warning : Equinox tower towing	Near / on the tower
06899051470	Warning : safety at the base of removable tow bar	On the tow bar /stern
06899051480	Warning : if not started recharge battery before	Compartment battery
06899051270	Warning : outdoor rear seat safety	Rear passenger area

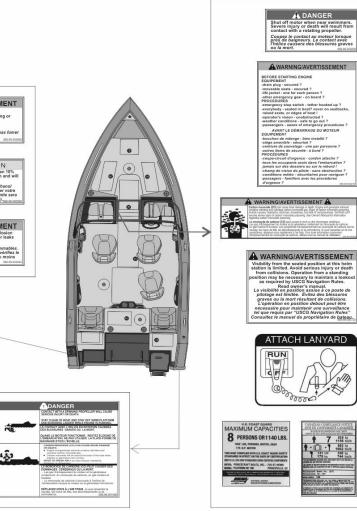

A WARNING/AVERTISSEMENT Contents can be under pressure Open slowly in well ventilated area, no smoking or open flames.

Le contenu peut être sous pression. Ouvrir lentement dans un espace ventilé, ne pas fumer ou de flamme nue.


A CAUTION / ATTENTION The use of fuels containing ethanol higher than 10% (E-10) can damage your engine or fuel system and will void the warranty. Never use (E-45). L'utilisation d'essence avec une quantité d'úthanol plas grandé que 10% (E-10), peut endommager votra annulée. Ne jamais utiliser de l'essence (E-45), manufette

A WARNING/AVERTISSEMENT Avoid serious injury or death from fire or explosion resulting from leaking fuel. Inspect system for leaks at least once a year.

Les fuites d'essence sont explosives et inflammables. Pour éviter des blessures graves ou la mort, vérifiez le système d'essence pour déceler des fuites au moins une fois par année.






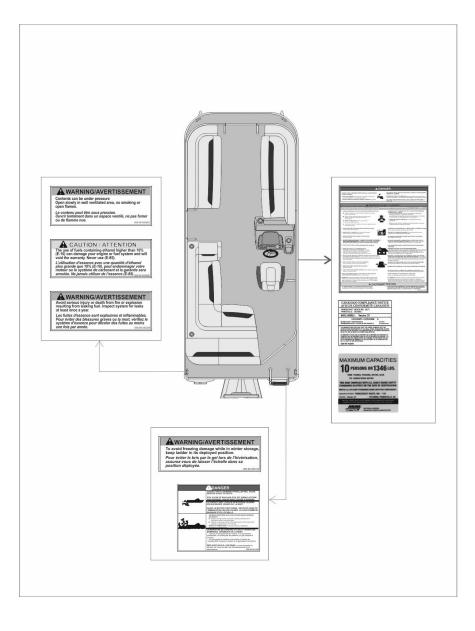


PRINCECRAFT. DESIGNATED SEATED PLACES UTILITIES

 
Starfish 16 L WT




Springbok 16 L WT

 


Yukon 14 LWT

 


Fisherman 14

 


Scamper

 


Starfish 16 WT

 


Springbok 16 WT

 


Yukon 14 WT

 

 


Sea Sprite 12

 


BOATS

 
Hudson 190 WS



Hudson 166 WS

 


Holiday 162 WS

 


Holiday 162 SC MAX



 
Amarok 166 SC




Resorter 160 SC

 


Hudson 170 WS

 


Hudson 190 BT

 

Holiday 162 WS Max

 


Amarok 166 WS

 


Amarok 166 BT

 Resorter 160 BT




PRINCECRAFT

 SPORT 175




Sport 185

 


Platinum 200



 Sport 175 MAX



Platinum 190

 


Platinum 220




DECK BOATS

 
Ventura 192




Ventura 200 RL

 


Ventura 230 RL

 


Ventura 194

 

Ventura 224

 


Ventura 230 WRL

 




PONTOONS

 
Brio 17




Brio 21 2S

 


Jazz 14 2RS

 

Jazz 19 4S

 



Brio 19

 


Jazz 17

 Jazz 21 2S




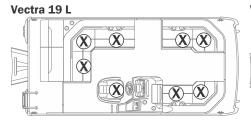


Vectra 21L 3SP

 




 


```
Vectra 23L 3SP
```

 


Vectra 23 RL

 


Vectra 23 RL 3F

 


Vectra 21 L

 


Vectra 21 RL

 

Vectra 23L

 




 

Vectra 23 RL 3SP




 Vectra 23 XT







Vectra 23 XT 3SP

 


Vectra 23 WRL 3SP

 

Vectra 25 RL

 


Vectra 25 RL 3F

 


Vectra 23 XT 3F

 $\mathbf{\hat{X}}\mathbf{\hat{X}}$

 
Vectra 23 WRL 3F




Vectra 25 RL 3SP

 


Sportfisher 21 2S

 


Sportfisher 21 4S

 


Sportfisher 21 2RS

 

Sportfisher 23 2S RL

 


Sportfisher 23 2S RL 3F

 


Sportfisher 23 2RS 3SP



 
Sportfisher 21 2S 3SP




Sportfisher 21 4S 3SP

 


Sportfisher 21 2RS 3SP

 


Sportfisher 23 2S RL 3SP

 


Sportfisher 23 2RS

 


Sportfisher 23 2RS 3F

 


Sportfisher LX 25 2RS

 


Sportfisher LX 25 2RS 3F

 


Quorum 23 RL 3SP

 


Quorum 23 XT

 


Quorum 23 XT 3F

 


Quorum 25 RL 3SP

 


Sportfisher LX 25 2RS 3SP

 


Quorum 23 RL

 


Quorum 23 RL 3F

 


Quorum 23 XT 3SP

 


Quorum 25 RL

 


Quorum 25 RL 3F

 

Vogue 23 RL

 


Vogue 23 RL 3F

 


Vogue 25 RL 3SP

 Vogue 27 RL 3F




Vogue 25 RL 3F

 

Vogue 27 XT 3F



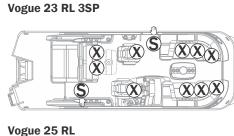

1.27

PRINCECRAFT.

AQUATIC INVASIVE SPECIES (AIS)

Aquatic invasive species (AIS) are plants and animals that live in water. They have the potential to cause economic, environmental or human health damage, and have a negative impact on the waterway.



As responsible boaters and citizens, every boat owner should do his or her part to prevent the spread of invasive species. In many cases, the law requires it too. Check local regulations for any waterway where you're boating.

After every boating trip, follow three simple steps before leaving access to the water to stop the spread of aquatic invasive species (AIS): clean, drain, dry.

It's up to the boater to protect the environment from the damage that aquatic invasive species (AIS) can cause..

CLEANING


Inspect and remove all aquatic plants, animals, mud and debris from boat, motor, trailer, anchor and all water sports equipment. Rinse, scrub or wash, as appropriate, away from storm drains, ditches or waterways. Rinse boat and trailer with hot water, if possible. Rinse motor in accordance with owner's manual.

DRY OUT:

Allow the boat to dry completely before sailing again.

DEALERS

Your dealer will inspect your boat when you take delivery to ensure that it is in perfect condition and that all components are working properly. Your dealer will discuss the terms of all warranties and stress the importance of renewing each warranty with the manufacturer. He will also explain the appropriate procedures for obtaining warranty service. On request, he will also provide information on the operation of the boat and its systems and components.

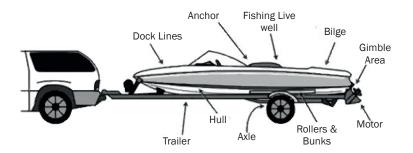

Note : Some localities may require inspection or decontamination before and/or after launching. Check state/provincial or local laws and regulations for requirements prior to traveling to go boating..